

Fill Volumes - Repair Boots

Split Repair Boots Product #	Ounces DBB IV Bonder or DRP Paste	Ounces DBB III Bonder	Ounces DBF II Fill
RB 4-0.9	1	1/2	2 1/2
RB 4-1.1	1	1/2	2 1/2
RB 4-1.4VF	1	1/2	1
RB 4-1.4	1	1/2	2
RB 8-0.9	2	1	13
RB 8-1.1	2	1	12 1/2
RB 8-1.4	2	1	12
RB 8-1.6	2	1	11
RB 8-1.7	2	1	11
RB 8-1.8	2	1	10
RB 8-1.9	2	1	10
RB 8-2.0	2	1	10
RB 8-2.2	2	1	9
RB 8-2.4	2	1	8
RB 8-2.5	2	1	8
RB 8-2.7	2	1	7
RB 8-2.9	2	1	6 1/2
RB 8-3.0	2	1	6
RB 8-3.6	2	1	3
RB 8-UK	2	1	14
RB 10-2.0	3	1	25
RB 10-2.4	3	1	24
RB 10-2.5	3	1	24
RB 10-2.7	3	1	22
RB 10-3.0	3	1	20
RB 10-3.6	3	1	17
RB 10-3.8	3	1	16
RB 10-3.9	3	1	16
RB 10-3.9SDP	3	1	38
RB 10-4.4	3	1	13
RB 10-4.5	3	1	12
RB 10-UK	3	1	28
RB 12-2.0	4	1	34
RB 12-2.2	4		33
RB 12-2.4	4	1	32
RB 12-2.5	4	1	31
RB 12-2.7	4	1	30
RB 12-2.9	4	1	29
RB 12-3.0	4	1	29
RB 12-3.6	4	1	28
RB 12-3.9	4	1	24
RB 12-4.5	4	1	20
RB 12-4.9	4	1	18
RB 12-UK	4	1	40
RB 14-4.5	6	1 1/2	38

Repair Boot Kit	Ounces DBB IV Bonder or DRP Paste	Ounces DBB III Bonder	Ounces DBF II Fill
URBK Z3950-1.1	1 1/2	1/2	18
URBK Z3950-1.4	1 1/2	1/2	18
URBK Z3950-1.8	1 1/2	1/2	16
URBK Z3950-2.0	1 1/2	1/2	14
URBK Z3950-2.4	1 1/2	1/2	12
URBK Z3950-2.5	1 1/2	1/2	12
URBK Z3950-2.7	1 1/2	1/2	12
URBK Z3950-2.9	1 1/2	1/2	10
URBK Z 3950-3.6	1 1/2	1/2	8
URBK Z3950-4.5	1 1/2	1/2	6

Notes:

Fill Volumes measured with appropriate pipe clamped in part. RB volumes may be less than indicated if existing penetration fittings are left in place.

DBB III Bonder is used for:
Bonding split Fuel-Thane parts.

DBB IV Bonder is used for:
Any part on Fiberglass sumps.

DRP Paste can be used for:
Any part attaching to Poly sumps.
Any Alcryn part attaching to Fiberglass sumps.